

NOTE:

1. REFER TO FIRESTONE WEBSITE FOR MOST CURRENT INFORMATION.
2. 9" QUICKSEAM FORMFLASH MUST EXTEND TO WITHIN 1/4" (6 mm) OF THE METAL EDGE.
3. INSTALL METAL WORK TO FIRESTONE INSTALLATION INSTRUCTIONS.
4. LAP SEALANT IS REQUIRED ALONG UPSLOPE EDGE OF QUICKSEAM FLASHING WHEN ROOF SLOPE IS 1" (25 mm) PER FOOT OR GREATER. REFER TO PLS-4 FOR SEAM EDGE TREATMENT.
5. WOOD NAILER MUST BE INSTALLED TO MEET APPLICABLE BUILDING CODES OR 200 LBS PER LINEAR FOOT MINIMUM IN ANY GIVEN DIRECTION.
6. FLANGE OF METAL MUST BE FULLY SUPPORTED BY WOOD AND TERMINATED AT LEAST 1/2" (13 mm) FROM EDGE OF WOOD.

*Bldg D*  
 $36 \times 174 = 6264 \text{ SF}$   
 $36.12 \times 174 = 6285 \text{ SF}$  *Roof Area*  
 1:12 pitch  
 15' height at eave  
 16.5 height at peak


MAXIMUM WARRANTY: **30 YEARS**



<b>ROOF EDGE WITH FIRESTONE UNA-EDGE DE (DRIPEDGE)</b>	
RUBBERGARD™ PLATINUM	ACCEPTABLE SYSTEMS: PLATINUM

ISSUE / REVISION DATE: 6/16/2014
NOT TO SCALE

DETAIL NO. <b>PRE-6A</b>
-----------------------------

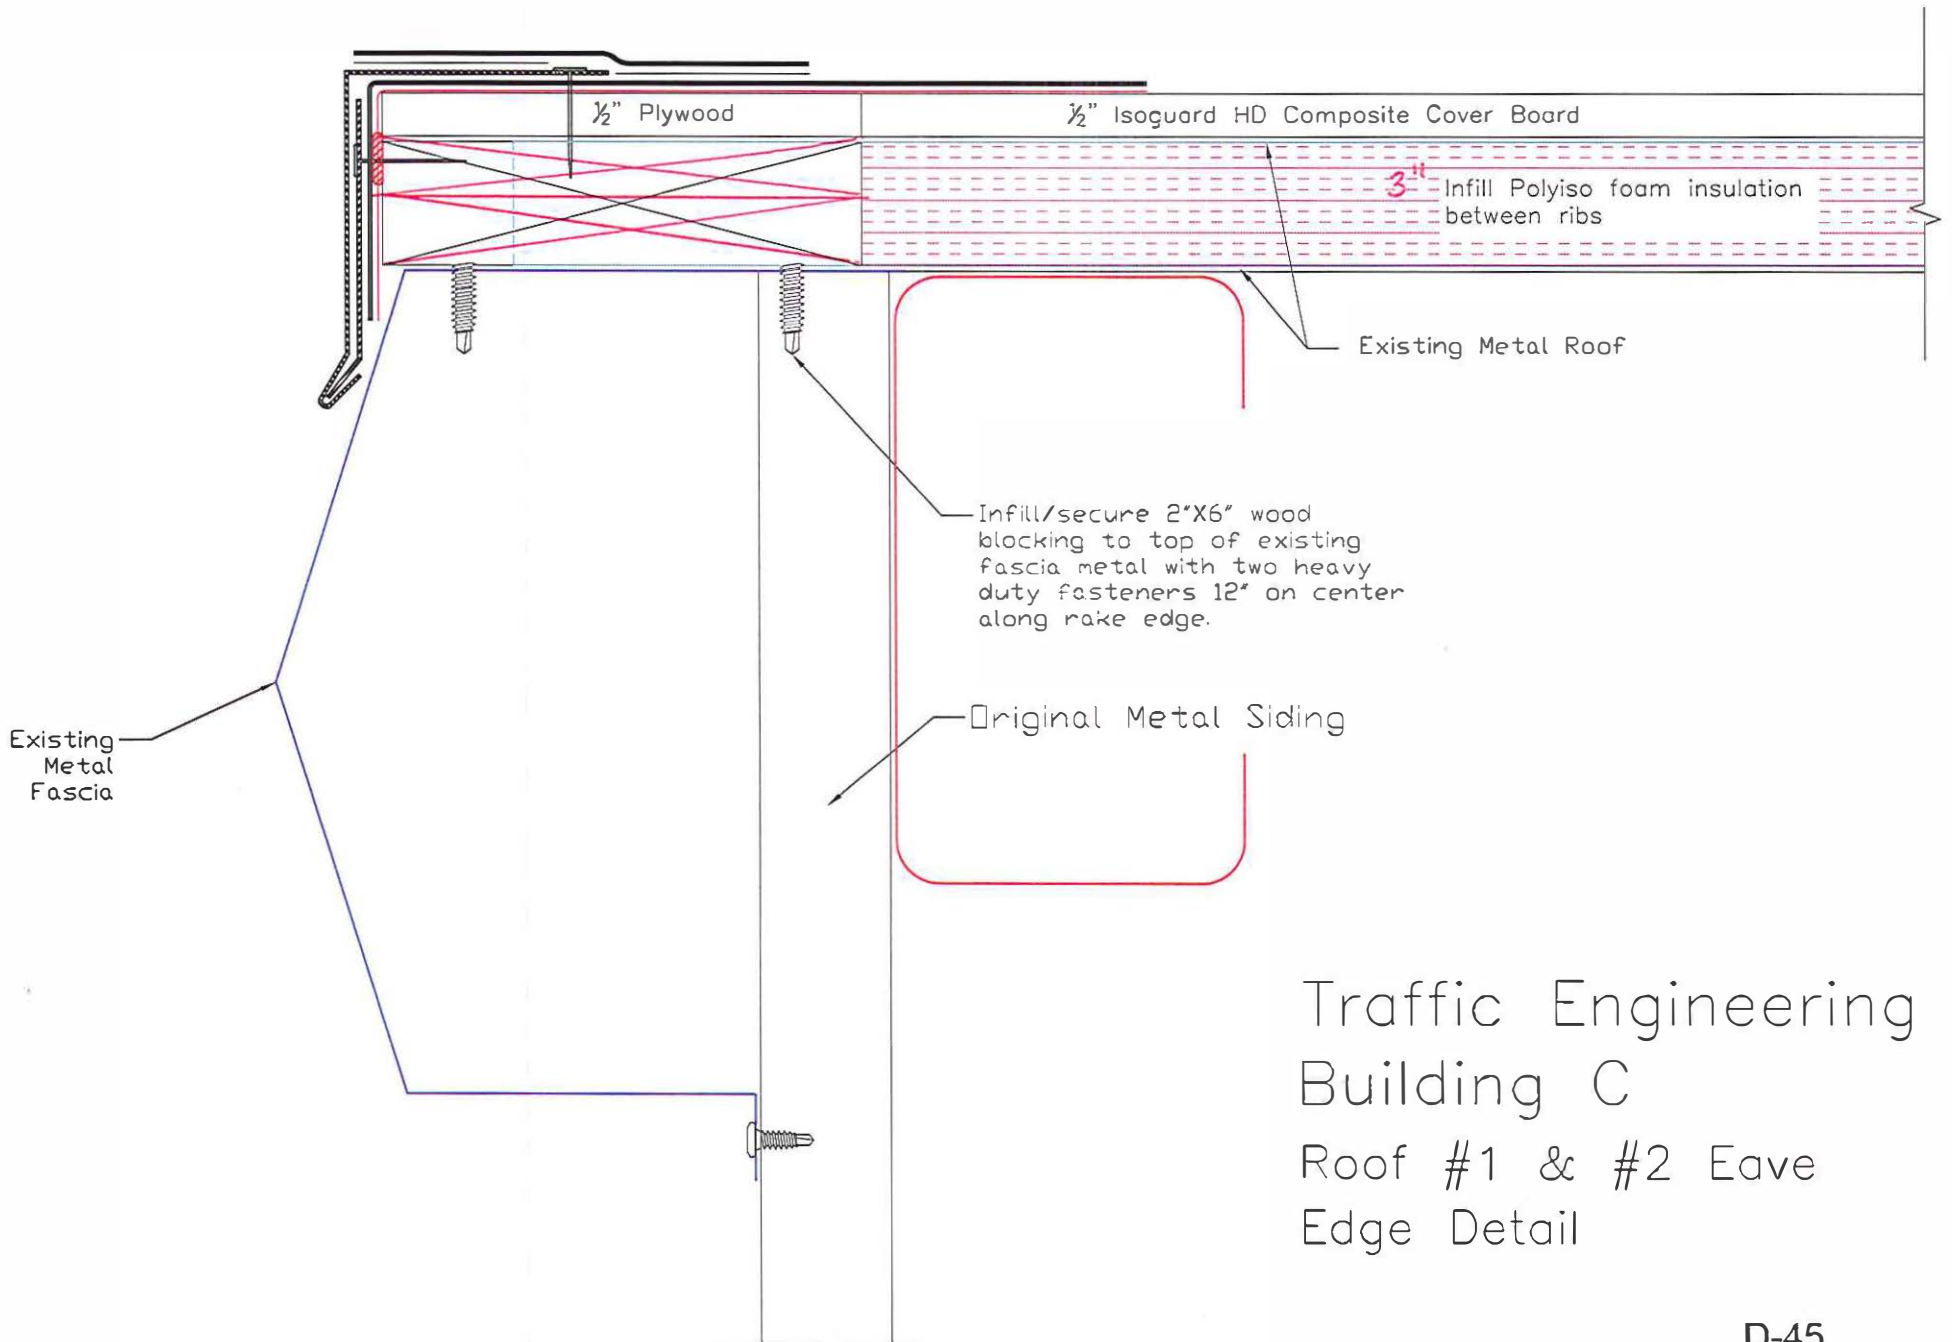

Traffic Engineering  
 Building C  
 Roof #1 & #2 Eave  
 Edge Detail

